


# HOV SPALJÈ

MONTERINGSANVISNING - ASSEMBLY INSTRUCTIONS  
MONTAGE - MONTAGEANLEITUNG  
KASAUSOHJEET

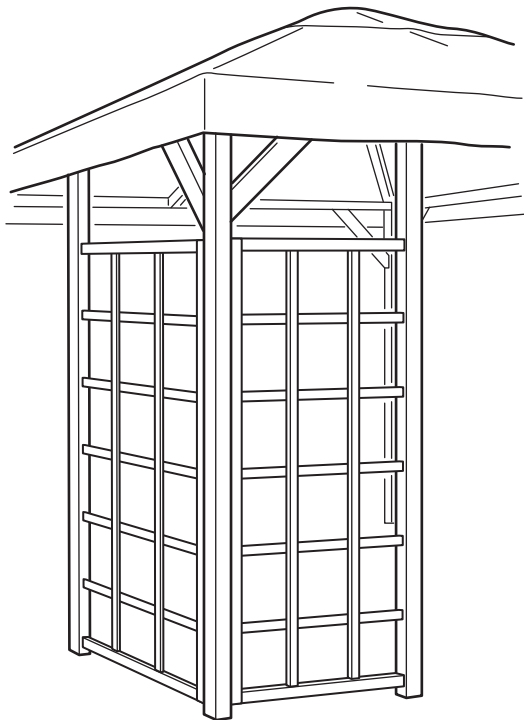

A = 6x




70 mm

B = 6x




20 mm

C = 4x

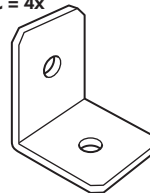

1

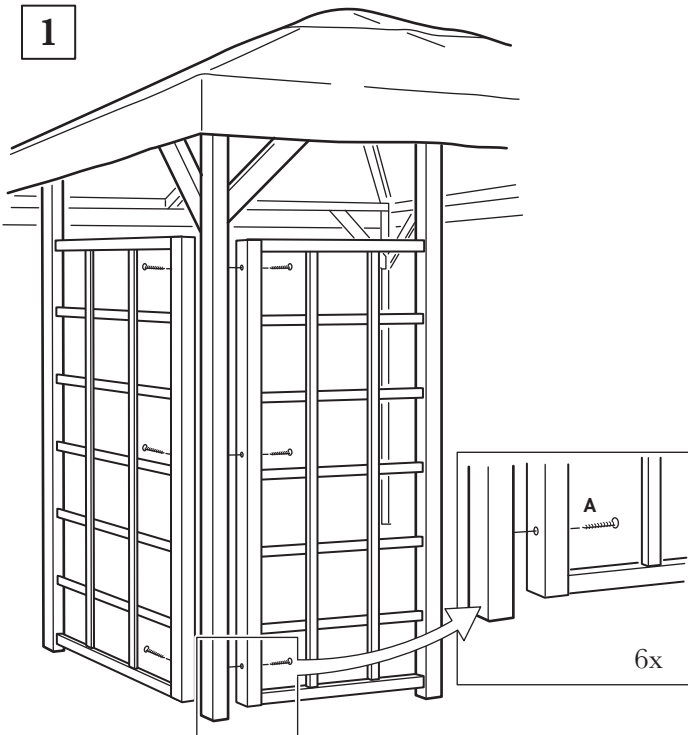

2

